

# Quick Reference Guide

## Mx-4000 Series

In the event of a fire alarm, call: -

TEL: \_\_\_\_\_

For Service & Maintenance, contact: -

\_\_\_\_\_

\_\_\_\_\_

TEL: \_\_\_\_\_

### Controls & Indications

**Navigation Buttons**

- Press to scroll through Menu Options. Press to display more information.
- Press to scroll through menu Options. Press to scroll through lists of zones or devices.
- Press to confirm entry of numeric or letter information entry. Press to confirm selection of a menu option. Press to change some of the configuration options.

**Number Buttons**

- Used to enter numbers or letters.
- Press to return to a previous menu. Press to exit the menu functions and return to the normal display.
- Press to show or return to Level 1 or Level 2 Menu Functions. Main User functions are VIEW, TEST, DISABLE & ENABLE.

**Control Buttons**

- Reset:** Press to reset the panel from a latched condition.
- Mute:** Press to mute the internal buzzer.
- Silence / Re-sound: Press to silence the bells. Press again to re-sound the bells.
- Evacuate: Press to initiate a manual evacuation and sound the alarms.

**LED Status Indicators**

- RED** Separate LED Indicators show the presence of a fire alarm condition and (if configured) that the fire brigade has been called.
- YELLOW** Indicate other system operating conditions including Fault, Test and Disabling conditions.
- GREEN** Indicates the presence of power to the system – if flashing, indicates that the panel is running on battery standby power.

The panels may be fitted with separate zone fire indicators comprising of 20, 50, 100 or 200 red indicators – these show the zones in a fire alarm condition.

In addition, the panels may be fitted with separate indications showing the location of fire alarms in a pictorial display (mimic diagram).

**Graphic Display**

The graphical display provides detailed information of the source of fires, faults and warnings. It also shows menus for use when inspecting or programming the operation of the panel.

Under normal conditions the panel display shows the time, date and status: -

Mx-4100

LEVEL 2  
16:05  
04 MAR 2002

---

NORMAL PANEL OPERATION  
(Press Menu to View)

The following is a typical menu display.

[Level 2 Menu]

<b>VIEW</b>	DISABLE	ENABLE
TEST	PRINT	COMMISSION

Refer to the User Manual (Document Number 680-014) for full operating instructions.

For easy reference, cut out and frame / mount on the wall next to the panel.

